

# WATERMAID® EcoBlend® - Quick Reference Guide

|                                  |   |
|----------------------------------|---|
| <p><b>CLOCK Setting</b></p>      | <ol style="list-style-type: none"> <li>1. Press CLOCK.</li> <li>2. Press DAY and use ▼ and ▲ to select the current day.</li> <li>3. Press HOUR and use ▼ and ▲ to select the current hour.</li> <li>4. Press MIN and use ▼ and ▲ to select the current minute.</li> <li>5. Press CLOCK to save.</li> </ol>  |
| <p><b>TIMER Setting</b></p>      | <ol style="list-style-type: none"> <li>1. Press TIMER.</li> <li>2. Ensure "Timers On" is displayed (or press ENTER to enable).</li> <li>3. Use ▼ and ▲ to select desired timer (T1 - T6).</li> <li>4. Press ENTER to display the desired timer.</li> <li>5. Press DAY and use ▼ and ▲ to select the day(s) to operate.</li> <li>6. Press HOUR and use ▼ and ▲ to select the start time hour.</li> <li>7. Press MIN and use ▼ and ▲ to select the start time minute.</li> <li>8. Press TIMER and use ▼ and ▲ to set the length of operation.</li> <li>9. Press TIMER to save.</li> <li>10. Press MENU to return to the home screen or ▼ to select another timer.</li> </ol>  |
| <p><b>Disable All Timers</b></p> | <p>To use an external or hard-wired timer, all in-built timers must be disabled:</p> <ol style="list-style-type: none"> <li>1. Press TIMER.</li> <li>2. Press ENTER and "Timers Off" is displayed. (Otherwise, press ENTER again).</li> <li>3. Press MENU to exit.</li> <li>4. Press POWER to turn the chlorinator on (unit is in manual mode).</li> </ol>  |
| <p><b>Manual On/Off</b></p>      | <p>Press POWER at any time to turn the unit on or off temporarily.<br/>To turn the EcoBlend® off permanently, all in-built timers will need to be disabled; otherwise the unit will restart at the next scheduled timer event.</p>  |
| <p><b>BOOST</b></p>              | <ol style="list-style-type: none"> <li>1. Press BOOST.</li> <li>2. Use ▼ and ▲ to select the number of boost hours.</li> <li>3. Press ENTER to commence boost cycle.</li> </ol> <p>To cancel boost once it has started, press BOOST and then ENTER to stop.</p>   |
| <p><b>BACKWASH</b></p>           | <ol style="list-style-type: none"> <li>1. Press BACKWASH.</li> <li>2. Press ENTER to start a backwash program and use ▼ and ▲ to select the backwash time in minutes.</li> <li>3. Press ENTER, and the screen will prompt you to set the multi-port valve on your filter to the backwash setting. (To cancel, press ▼ and then ENTER twice)</li> <li>4. Once the valve has been set to backwash, press ENTER to continue. (To skip backwash once it has started, press MENU)</li> <li>5. The screen will now prompt you to set the multi-port valve on your filter to the rinse setting. (To cancel, press ▼ and then ENTER twice)</li> <li>6. Once the valve has been set to rinse, press ENTER to continue. (To skip rinse once it has started, press MENU)</li> <li>7. The screen will now prompt you to set the multi-port valve on your filter to the filter setting.</li> <li>8. Once valve has been set to filter, press ENTER to return to normal operation. The backwash program is complete.</li> </ol> |

Please refer to the [WATERMAID® EcoBlend® Owner's Handbook](#) for more detailed information.